 
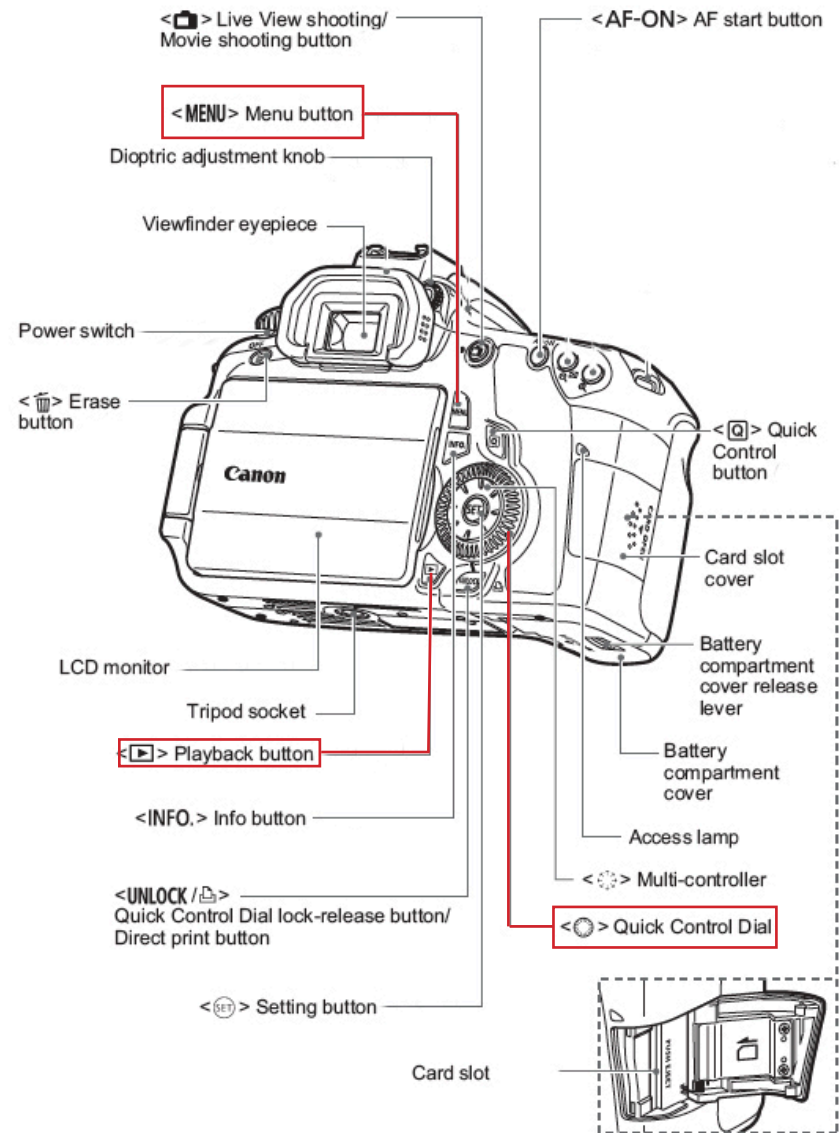 


Canon 60D Quick Guide

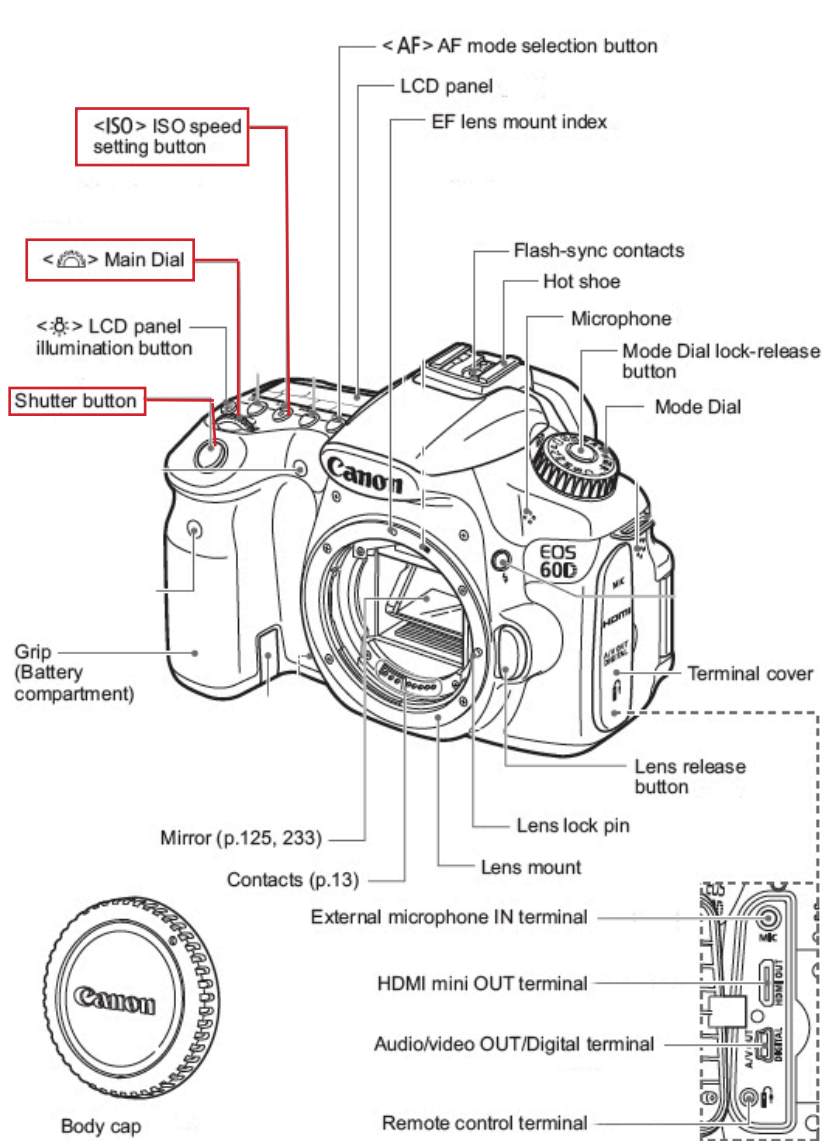

Canon 60D Quick Guide

 
After turning the camera on (power switch is at the top left of the back of the camera), turn the Mode Dial to **<P>**.

Press the **Menu Button** to see the Menu Settings.

Use the **Main Dial** to choose the tab, and the **Quick Control Dial** to scroll through the menu options

In the **first tab**, set

- Movie exposure to *MANUAL*
- AF mode to *LIVE mode*
- *Enable* AF w/shutter for Movie Mode
- AF and metering button leave at 0
- ISO speed settings to *1/3-stop*
- *Disable* Highlight tone priority

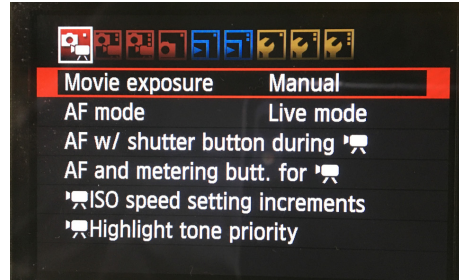


In the **second tab**, set

- Movie Move rec. size to *1920 x 1080/24*
- Sound recording to *Manual*
- Silent Shooting can be left in *Mode 1*
- Metering Timer at *16 sec.*
- Grid Display can be turned *On or Off* to your preference, as a composition guide




In the **third tab**, set

 - Exposure comp.to 0
- Auto Lighting Optimizer to *Disable*
- Picture Style to *Standard*
- White Balance to *AWB*, or to the exact setting if known, such as *Daylight*
- Custom White Balance is not applicable if White Balance has been selected

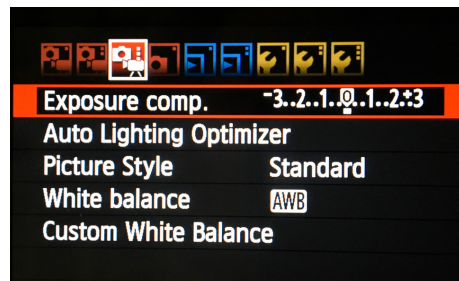

 On-Camera Settings: Shutter Speed, Exposure & ISO

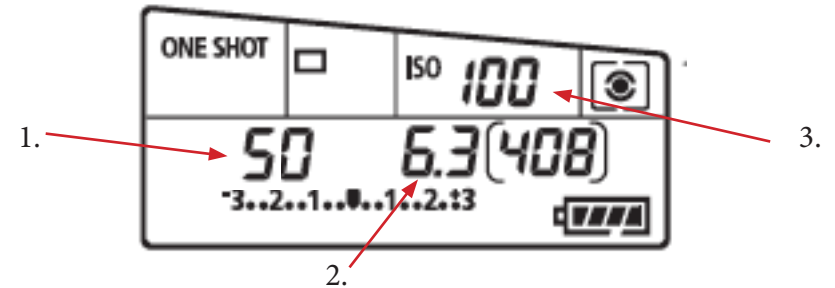

1. Turn the **Main Dial** to select your *shutter speed*. For a normal motion blur look, it should be twice that of your selected frame rate. If your frame rate is 24fps, select a shutter speed of 50

2. Turn the **Quick Control Dial** to select your *exposure*

3. Press the **ISO Button** and then use the **Main Dial** to select your *ISO setting*

For **Auto Focusing**, set the lens to **AF** and depress the Shutter Button briefly to allow the lens to focus on a selected area.

For **Manual Focusing**, make sure the lens is set to **MF** and use the focus ring on the lens itself.

Video or still images can be reviewed by pressing the **Playback Button** located at the bottom right of the LED screen. You can scroll through files using the **Main Dial**.

Press the **Playback Button** again to return to regular filming mode.